

Basis Voices: General MIDI, XG Bank 0, Panel Bank 112

Heiko Plate

heikoplate@gmx.de

Voice#	General MIDI (GM)	XG-Bank 0	Panel Bank 112
0	Acoustic Grand Piano	Grand Piano	Grand Piano
1	Bright Acoustic Piano	Brite Piano	Bright Piano
2	Electric Grand Piano	Electric Grand Piano	Midi Grand
3	Honky-tonk Piano	Honky Tonk Piano	Honky Tonk
4	Rhodes Piano	Electric Piano 1	Funk Electric Piano
5	Chorused Piano	Electric Piano 2	DX Modern
6	Harpsichord	Harpsichord	Harpsichord
7	Clavinet	Clavinet	Clavinet
8	Celesta	Celesta	Celesta
9	Glockenspiel	Glocken	Glocken
10	Music Box	Music Box	Music Box
11	Vibraphone	Vibes	Vibraphone
12	Marimba	Marimba	Marimba
13	Xylophone	Xylophone	Xylophone
14	Tubular Bells	TubularBells	Tubular Bell
15	Dulcimer	Dulcimer	Dulcimer
16	Hammond Organ	Draw Organ	Jazz Organ1
17	Percussive Organ	Percussive Organ	Click Organ
18	Rock Organ	Rock Organ	Rock Organ2
19	Church Organ	Church Organ	Pipe Organ
20	Reed Organ	Reed Organ	Reed Organ
21	Accordion	Accordion	Musette
22	Harmonica	Harmonica	Harmonica
23	Tango Accordion	Tango Accordion	Tango Accordion
24	Acoustic Guitar (nylon)	Nylon Guitar	Classic Guitar
25	Acoustic Guitar (steel)	Steel Guitar	Folk Guitar
26	Electric Guitar (jazz)	Jazz Guitar	Jazz Guitar
27	Electric Guitar (clean)	Clean Guitar	Clean Guitar
28	Electric Guitar (muted)	Muted Guitar	Muted Guitar
29	Overdriven Guitar	Overdriven Guitar	Overdriven Guitar
30	Distortion Guitar	Distortion Guitar	Distortion Guitar
31	Guitar Harmonics	Guitar Harmonics	β
32	Acoustic Bass	Acoustic Bass	Acoustic Bass
33	Electric Bass (finger)	Finger Bass	Finger Bass
34	Electric Bass (pick)	Pick Bass	Pick Bass
35	Fretless Bass	Fretless Bass	Fretless Bass
36	Slap Bass 1	Slap Bass 1	Slap Bass
37	Slap Bass 2	Slap Bass 2	Funk Bass
38	Synth Bass 1	Synth Bass 1	Synth Bass
39	Synth Bass 2	Synth Bass 2	Analog Bass
40	Violin	Violin	Solo Violin
41	Viola	Viola	Viola
42	Cello	Cello	Cello
43	Contrabass	Contrabass	Contrabass
44	Tremolo Strings	Tremolo Strings	Tremolo Strings
45	Pizzicato Strings	Pizzicato Strings	Pizzicato Strings
46	Orchestral Harp	Harp	Harp

Voice#	General MIDI (GM)	XG-Bank 0	Panel Bank 112
47	Timpani	Timpani	Timpani
48	String Ensemble 1	Strings 1	Strings
49	String Ensemble 2	Strings 2	Chamber Strings
50	Synth Strings 1	Synth Strings 1	Synth Strings
51	Synth Strings 2	Synth Strings 2	Analog Strings
52	Choir Aahs	Choir Aahs	Choir
53	Voice Oohs	Voice Oohs	Vox Humana
54	Synth Voice	Synth Voice	Air Choir
55	Orchestra Hit	Orchestra Hit	Orchestra Hit
56	Trumpet	Trumpet	Solo Trumpet
57	Trombone	Trombone	Solo Trombone
58	Tuba	Tuba	Tuba
59	Muted Trumpet	Muted Trumpet	Muted Trumpet
60	French Horn	French Horn	French Horn
61	Brass Section	Brass Section	Brass Section
62	Synth Brass 1	Synth Brass 1	Synth Brass
63	Synth Brass 2	Synth Brass 2	Analog Brass
64	Soprano Sax	Soprano Sax	Soprano Sax
65	Alto Sax	Alto Sax	Alto Sax
66	Tenor Sax	Tenor Sax	Tenor Sax
67	Baritone Sax	Baritone Sax	Baritone Sax
68	Oboe	Oboe	Oboe
69	English Horn	English Horn	English Horn
70	Bassoon	Bassoon	Bassoon
71	Clarinet	Clarinet	Clarinet
72	Piccolo	Piccolo	Piccolo
73	Flute	Flute	Flute
74	Recorder	Recorder	Recorder
75	Pan Flute	Pan Flute	Pan Flute
76	Bottle Blow	Bottle	β
77	Shakuhachi	Shakuhachi	Shakuhachi
78	Whistle	Whistle	Whistle
79	Ocarina	Ocarina	Ocarina
80	Lead 1 (square)	Square Lead	Square Lead
81	Lead 2 (sawtooth)	Sawtooth Lead	Sawtooth Lead
82	Lead 3 (calliope lead)	Calliope Lead	β
83	Lead 4 (chiff lead)	Chiff Lead	Aero Lead
84	Lead 5 (charang)	Charang Lead	Portatone
85	Lead 6 (voice)	Voice Lead	β
86	Lead 7 (fifths)	Fifth Lead	β
87	Lead 8 (bass + lead)	Bass & Lead	Under Heim
88	Pad 1 (new age)	New Age Pad	Fantasia
89	Pad 2 (warm)	Warm Pad	Area 51
90	Pad 3 (polysynth)	Poly Synth Pad	Krypton
91	Pad 4 (choir)	Choir Pad	Xenon Pad
92	Pad 5 (bowed)	Bowed Pad	DX Pad
93	Pad 6 (metallic)	Metallic Pad	Loch Ness
94	Pad 7 (halo)	Halo Pad	Equinox
95	Pad 8 (sweep)	Sweep Pad	Wave
96	FX 1 (rain)	Rain	Synchronize
97	FX 2 (soundtrack)	Soundtrack	Far East
98	FX 3 (crystal)	Crystal	Stardust
99	FX 4 (atmosphere)	Atmosphere	Atmosphere
100	FX 5 (brightness)	Brightness	β

Voice#	General MIDI (GM)	XG-Bank 0	Panel Bank 112
101	FX 6 (goblins)	Goblins	Skydiver
102	FX 7 (echoes)	Echoes	Ⓕ
103	FX 8 (sci-fi)	Sci-Fi	Baroque
104	Sitar	Sitar	Sitar
105	Banjo	Banjo	Banjo
106	Shamisen	Shamisen	Shamisen
107	Koto	Koto	Koto
108	Kalimba	Kalimba	Kalimba
109	Bagpipe	Bagpipe	Bagpipe
110	Fiddle	Fiddle	Fiddle
111	Shanai	Shanai	Ⓕ
112	Tinkle Bell	Tinkle Bell	Ⓕ
113	Agogo	Agogo	Ⓕ
114	Steel Drums	Steel Drums	Steel Drums
115	Wood Block	Wood Block	Ⓕ
116	Taiko Drum	Taiko Drum	Ⓕ
117	Melodic Tom	Melodic Tom	Ⓕ
118	Synth Drum	Synth Drum	Ⓕ
119	Reverse Cymbal	Reverse Cymbal	Ⓕ
120	Guitar Fret Noise	Fret Noise	Ⓕ
121	Breath Noise	Breath Noise	Ⓕ
122	Seashore	Seashore	Ⓕ
123	Bird Tweet	Tweet	Ⓕ
124	Telephone Ring	Telephone Ring	Ⓕ
125	Helicopter	Helicopter	Ⓕ
126	Applause	Applause	Ⓕ
127	Gunshot	Gunshot	Ⓕ

Auf den Yamaha-Keyboards werden alle GM-Voices durch entsprechende der XG Voice-Bank 0 realisiert. Ebenfalls werden bei Anwahl der Panel-Voice-Banks 112, 113,... die nicht mit Voices belegten Voice-Nummern auf Voices der XG Bank 0 abgebildet.

Ende